



Dear Tailer

Here is your brand new **DIGITAIL!**

It's been nearly two years of design, testing and play, and we really hope you love it. There are so many new features and elements – from the *D-Clip* to the Fast charger, from Bluetooth to the App!

So let's get going. It's easy to use:

1. Download the app! You can find it on the [Google Play Store](#).
2. **Charge your Tail for at least 4.5 hours.** Please read the notes on the second page about the batteries too. You cannot use your Tail whilst it is charging.
3. Switch on Bluetooth!
4. Switch on the **DIGITAIL!** It's the recessed button on the top of the Tail. You can unpop the back of the cover to see it, or slide a finger in there and press it down.
5. Run the app! At the top, it will tell you it has found your tail. So press the **CONNECT** button.
6. And now you can play with the Tail. Start with the **MOVES** page, and see what the built in moves do. In the coming weeks, more and more features will be added. Bear with us while we do this, we are working hard to add more things all the time.

Please read the FAQ on the second page of these instructions. The latest version of these instructions is [here](#)

We hope you love your new Tail as much as we loved making it.

Best wishes

Master Tailer

FAQ

- If your Android phone can't see the Tail, make sure the tail is on, and has been charged! Also make sure Bluetooth is ON. **You don't need to "Pair" it.** Just run the app and press connect.
- To charge your tail, simply connect it to the power supply. When charged, the led on the charger will go from red to green. **You should give your Tail a good 4.5 hour charge when you receive it.**

The new batteries inside the tail need around 6 times being charged and discharged to reach their best capacity.

- To switch it on, press down on the little black button in the recess at the top of the tail.
- You have 1 minute to connect to the tail with the app. After that, it will switch itself off, to save power. To start again, press the button to switch the Tail back on.
- If you have trouble with anything **DIGITaiL**, please visit [our Telegram group](#) or [email us!](#) We will also tell the group about new app versions being available, just until the Play Store does it for us.
- On the D-Clip, at the back of your Tail, there is a tab, which slides down inside the belt. **DON'T PRESS DOWN ON THE TAB**
- Don't brush your Tail covers! If they have marks, you can use a damp cloth to rub them. Or use your fingers to remove anything that may be stuck there. They are not suitable for dry cleaning.
- Your tail is **NOT INDESTRUCTIBLE!** Be sensible with its use – repeating the same move over and over without a pause will damage your tail. You should let your tail breathe, giving pauses between activity. Let it feel natural. And if you do, it will last for a very long time.
- **Don't allow your tail battery to completely drain.** The battery indicator in the app is approximate, and you will have slightly more power left in the tail, even when it is showing empty. But using it up completely is bad for the battery and will shorten its life.

