

Baby Tails

Instructions for Huskies, Bunnies, Deer, Squirrels



Pulling back the fur cover will show you the belt loop and the power button.
One press on the power button to switch it on. One long press will switch it off

Let a move finish before doing a new one.

AUTO Mode is one long press on button D.


Batteries are 4 x AAA. Always change the whole set.

Important!

Dont hold 2 buttons down on the remote control at the same time for more than a few seconds. It will reset your remote. One button at a time!

Please be gentle when you pull out the battery holders.

They are attached to the tail.

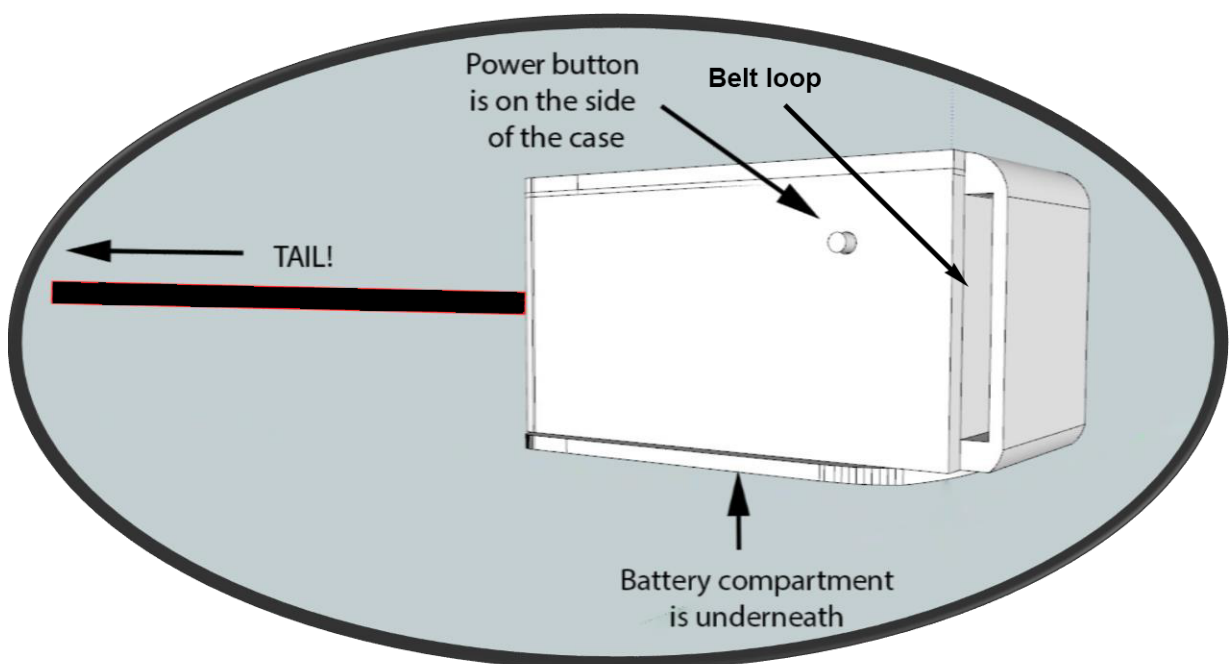

Disclaimer

Please read the instructions for use above in full before using your Tail Company Gear. Not familiarising yourself with the proper method of use could cause damage to the gear, or to yourself, or both. This text is also subject to change. An up-to-date version will form part of the file available at <https://thetailcompany.com/eargear.pdf> or <https://thetailcompany.com/mitail.pdf> Support is also available on our website, through the chat service, or on our Telegram group.

By using this item, you hereby acknowledge that you have read this disclaimer and that you understand and agree to abide by the terms and conditions herein.

The Mechanical Tail Company Ltd accept no liability for damage, injury or legal responsibility incurred directly or indirectly from the use of this product. This product is not a toy, and should not be used by children under the age of thirteen years without supervision by an adult. Do not use the product if it appears damaged in any way.

Safety

Handle your EarGear or MiTail with care. They can be damaged, functionally impaired or broken if dropped, burned, punctured, crushed, disassembled or if exposed to liquid, excessive heat or other environmental conditions. EarGear and MiTail should be kept out of the reach of children and pets under 13 years of age when unsupervised.

Only use the supplied charging equipment for your Tail Company gear. Use of incorrect charging apparatus that does not meet international standards can cause fire, electric shock, injury or damage to you or the gear or other property.

Do not charge EarGear or MiTail unattended. If at any time the items give off an odour, exude smoke, or show other signs of damage, stop using the items immediately, and dispose of them in the correct manner.

Environmental Requirements

Operating temperature: -10 to 40 C / 14 to 104 F

Charging temperature: 10 to 30 C / 50 to 86 F

Storage temperature: 0 to 30 C / 32 to 86 F